

DOME[®] FS by HEATSAIL

TECHNICAL INFORMATION



**RUSTPROOF &
WEATHERPROOF**



**LOW ENERGY USAGE
ZERO CO2 EMISSION**



**MINIMUM OF
MAINTENANCE**

DOME® FS by HEATSAIL

FEATURES



IP
43

CE



**RUSTPROOF &
WEATHERPROOF**

The DOME is made out of high quality material such as Aluminium and Stainless steel, making it suitable for outdoor use.



**LOW ENERGY USAGE
ZERO CO2 EMISSION**

With an energy consumption of only 3.22 kW/h, the DOME uses less energy than similar products delivering optimal heating.



**MINIMUM OF
MAINTENANCE**

By using high efficient and durable ceramic heating elements and the best materials, the DOME is virtually maintenance free.



**PATENTED
DESIGN**

The unique patented design makes the DOME an absolute eyecatcher, exuding luxury, elegance and exclusivity.



Headquarters

Prins Boudewijnlaan 7 Unit A 08
2550 Kontich
Belgium
+ 32 3 502 99 88

North American office


10440 N Central Expressway
Suite 800, Dallas, Texas 75231
United States
+ 1 (214) 808 5091

W: www.heatsail.com/usa

E: ucm@heatsail.com

DOME® FS by HEATSAIL

DIMENSIONS

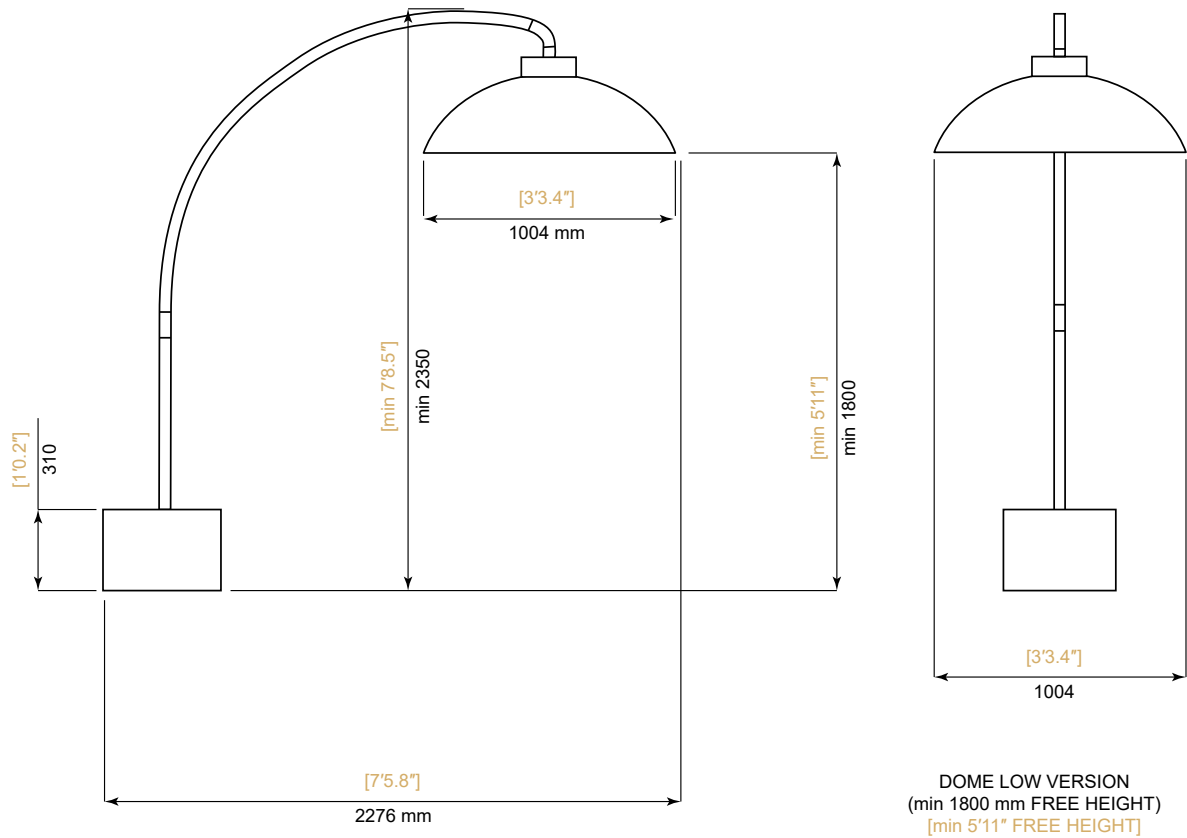

SPECIFICATIONS

Model	DOME FS
Heat output (W)	3100 W
Light Output (W)	120 W
Electrical connection	Optional 120/208V AC - 60 Hz 16 A (20 A recommended)
Dimensions (WxDxH)	2276 x 1004 x 2350 mm - [7'5.8" x 3'3.4" x 7'8.5"]
Mounting height requirement to ground	min 1800 mm; max 1950 mm - [min 5'11"; max 6'4.8"]
Weight	approx. 180 kg and needs to be anchored into the floor according to UL - [396 lbs]
Approvals	UL 60335-1, CAN/CSA-C22.2 No. 60335-1:16, CAN/CSA-E60335-2-30:13, IEC 60335-2-30, CE



Headquarters
 Prins Boudewijnlaan 7 Unit A 08
 2550 Kontich
 Belgium
 + 32 3 502 99 88

North American office
 10440 N Central Expressway
 Suite 800, Dallas, Texas 75231
 United States
 + 1 (214) 808 5091

W: www.heatsail.com/usa
E: ucm@heatsail.com

DOME® FS by HEATSAIL

ELECTRICAL SAFETY REQUIREMENTS

The use of the DOME requires an electrical installation with reliable safety grounding.

The installation's electrical safety can only be guaranteed if the device has been correctly connected to a grounding system built in accordance with the safety instructions. A preliminary inspection is absolutely essential. In the event of any uncertainty, a careful inspection must be done by a qualified and authorised technician. Heatsail will not be held responsible for injury and/or damage resulting from an ungrounded installation.


The installation of the DOME's electrical components requires a main connection of 208V AC-60 Hz (16 amp fuse appropriate RCD): the connection must be properly implemented in accordance with the applicable IEC-CEI standards. This product must be installed by a Qualified Electrician and the power supply connection should be in accordance with the requirements of NFPA 70 and OSHA Regulations 29 CFR 1910.304(b)(2).

Please note: statutory and other regulation may apply locally.

Before carrying out any maintenance or other work, the power supply must be disconnected by a licensed electrician. Use Lock-out/Tagout procedures to ensure that the power can't be switched on again accidentally. Adapters, power strips and extension cords may not be used for the DOME's electrical supply. A switch must be installed between the DOME and the fuse box at all times.

Noncompliance with these instructions may compromise the safety of the device. Heatsail will not be held liable for any damage resulting from these issues.

Please note: The DOME will be delivered with a supply cord of 6feet (1 m 90) without wall plug.

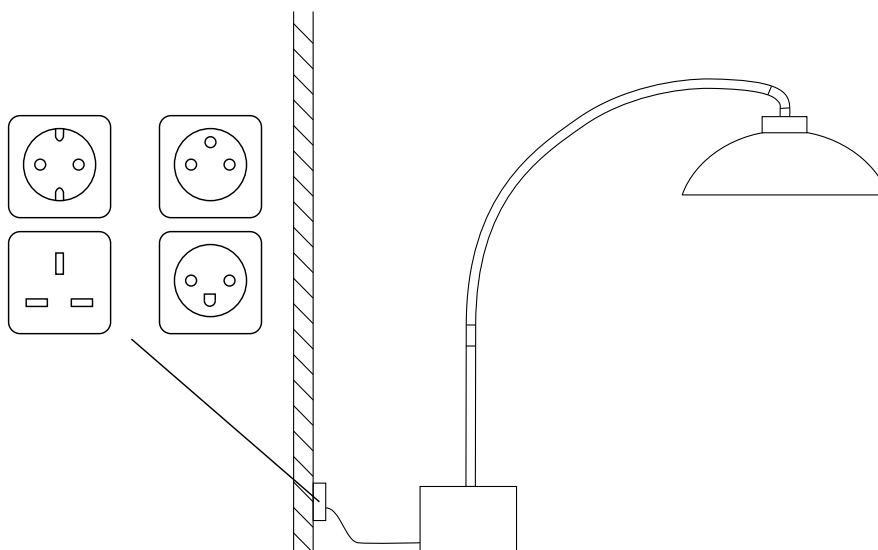

Headquarters
Prins Boudewijnlaan 7 Unit A 08
2550 Kontich
Belgium
+ 32 3 502 99 88

North American office
10440 N Central Expressway
Suite 800, Dallas, Texas 75231
United States
+ 1 (214) 808 5091

W: www.heatsail.com/usa
E: ucm@heatsail.com

DOME® FS by HEATSAIL


ELECTRICAL OVERVIEW

The DOME PT consists of a central heating element with a light, the hood of the 'DOME PT' which serves as protection and reflection of the far infrared rays. The central element is called 'heattube'. On the lower part you will find a 'heater block' with 5 rectangular and 1 round heater element. Above the heater block there is a halogen light, separated from the heater elements. The light consists of an R7S 78 mm halogen bulb, at 240V AC, behind a heat resistant glass. The glass can be lifted upwards to change the halogen bulb. A LED lamp couldn't be integrated as LED lights can not withstand these high temperatures.

There are three electrical circuits within the heattube. These circuits have a total of 16 amps at 208V AC.

- Circuit 1: consists of three rectangular heating elements and has a total heat output of 1500 W at 208V AC
- Circuit 2: consists of two rectangular heating elements and the lower round heating element and has a heat output of 1600 W at 208V AC
- Circuit 3: consists of a R7S bulb of 120 W at 208V AC

The incoming power is divided over the 3 circuits through 2 toggle switches, mounted on the control box at the back of the DOME. One switch (LOW - 0 - HIGH) controls the heating. The second switch (DIM - 0 - ON) controls the light. The heating settings can never be controlled by the remote control.

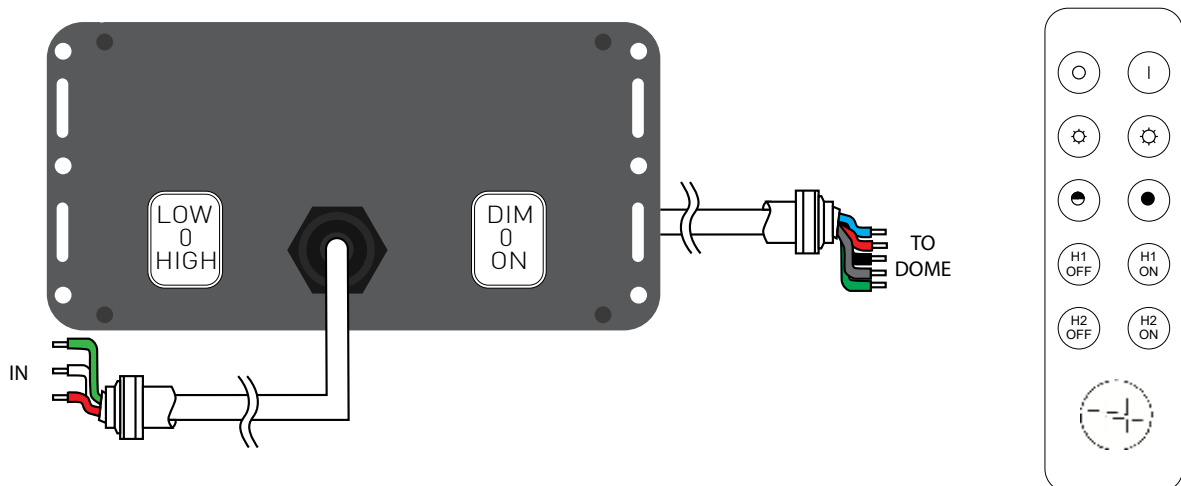

To connect the DOME to the main power, a single phase connection is required consisting of 2 hot wire, a neutral (with an output of 208V AC - 60 Hz) and 1 grounding wire in a size not less than 2.5 mm² / 14 AWG.



Headquarters
Prins Boudewijnlaan 7 Unit A 08
2550 Kontich
Belgium
+ 32 3 502 99 88

North American office
10440 N Central Expressway
Suite 800, Dallas, Texas 75231
United States
+ 1 (214) 808 5091

W: www.heatsail.com/usa
E: ucm@heatsail.com